

Assembly Instructions

Kensington Convertible Crib

Toddler Guard Rail





WARNING

FOR TODDLER BED USE

FAILURE TO FOLLOW THESE WARNINGS AND ASSEMBLY INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH.


- READ ALL INSTRUCTIONS BEFORE ASSEMBLING CRIB. **KEEP INSTRUCTIONS FOR FUTURE USE.**
- PREVENT BURNS. KEEP BED AWAY FROM OPEN FIRES AND OTHER HEAT SOURCES.
- ANY MATTRESS USED IN THIS BED MUST BE AT LEAST 27-1/4 IN. (69 CM.) BY 51-5/8 IN. (131 CM.), WITH A THICKNESS NOT EXCEEDING 6 IN. (15 CM.), AND A MINIMUM THICKNESS OF 4 IN. (100MM). THE DIMENSIONS OF THE MATTRESS SHOULD BE TAKEN FROM SEAM TO SEAM.
- THE MINIMUM AGE OF THE INTENDED USER SHALL NOT BE LESS THAN 15 MONTHS AND THE MAXIMUM WEIGHT SHALL NOT BE GREATER THAN 50 LBS. (22.7 KG)
- PROVIDED GUARDRAIL **MUST** BE USED.
- **DO NOT** PLACE BED NEAR WINDOWS WHERE CORDS FROM DRAPES OR BLINDS MAY STRANGLE A CHILD.
- **DO NOT** PLACE ITEMS WITH A STRING, CORD, OR RIBBON AROUND A CHILD'S NECK, SUCH AS HOOD STRINGS OR PACIFIER CORDS.
- **DO NOT** SUSPEND STRINGS OVER A TODDLER BED FOR ANY REASON.

IMPORTANT!

- CHECK THIS PRODUCT FOR DAMAGED HARDWARE, LOOSE JOINTS, MISSING PARTS OR SHARP EDGES BEFORE ASSEMBLY AND PERIODICALLY DURING USE. **DO NOT** USE CRIB IF ANY PARTS ARE MISSING, DAMAGED OR BROKEN. CONTACT WESTWOOD DESIGN: 635 N. BILLY MITCHELL RD., STE. B, SALT LAKE CITY, UTAH 84116, PHONE: 1-908-719-4707; EMAIL: SUPPORT@WESTWOODBABY.COM FOR REPLACEMENT PARTS AND INSTRUCTIONS IF NEEDED. NEVER SUBSTITUTE PARTS.

Step 1

- A.** Undo the four bolts attaching the upper footboard to the sides and remove the upper footboard. There are two bolts on each side.
- B.** If it's not already, adjust the spring to its lowest position, following the procedure shown in these instructions.
- C.** Place the **Right Day Bed Cap (J)** against the right crib side (the extra two threaded inserts on the side should face the inside of the crib as shown), thread the two bolts into the fittings on the cap, and tighten with the allen wrench.
- D.** Repeat for the **Left Day Bed Cap (H)**.

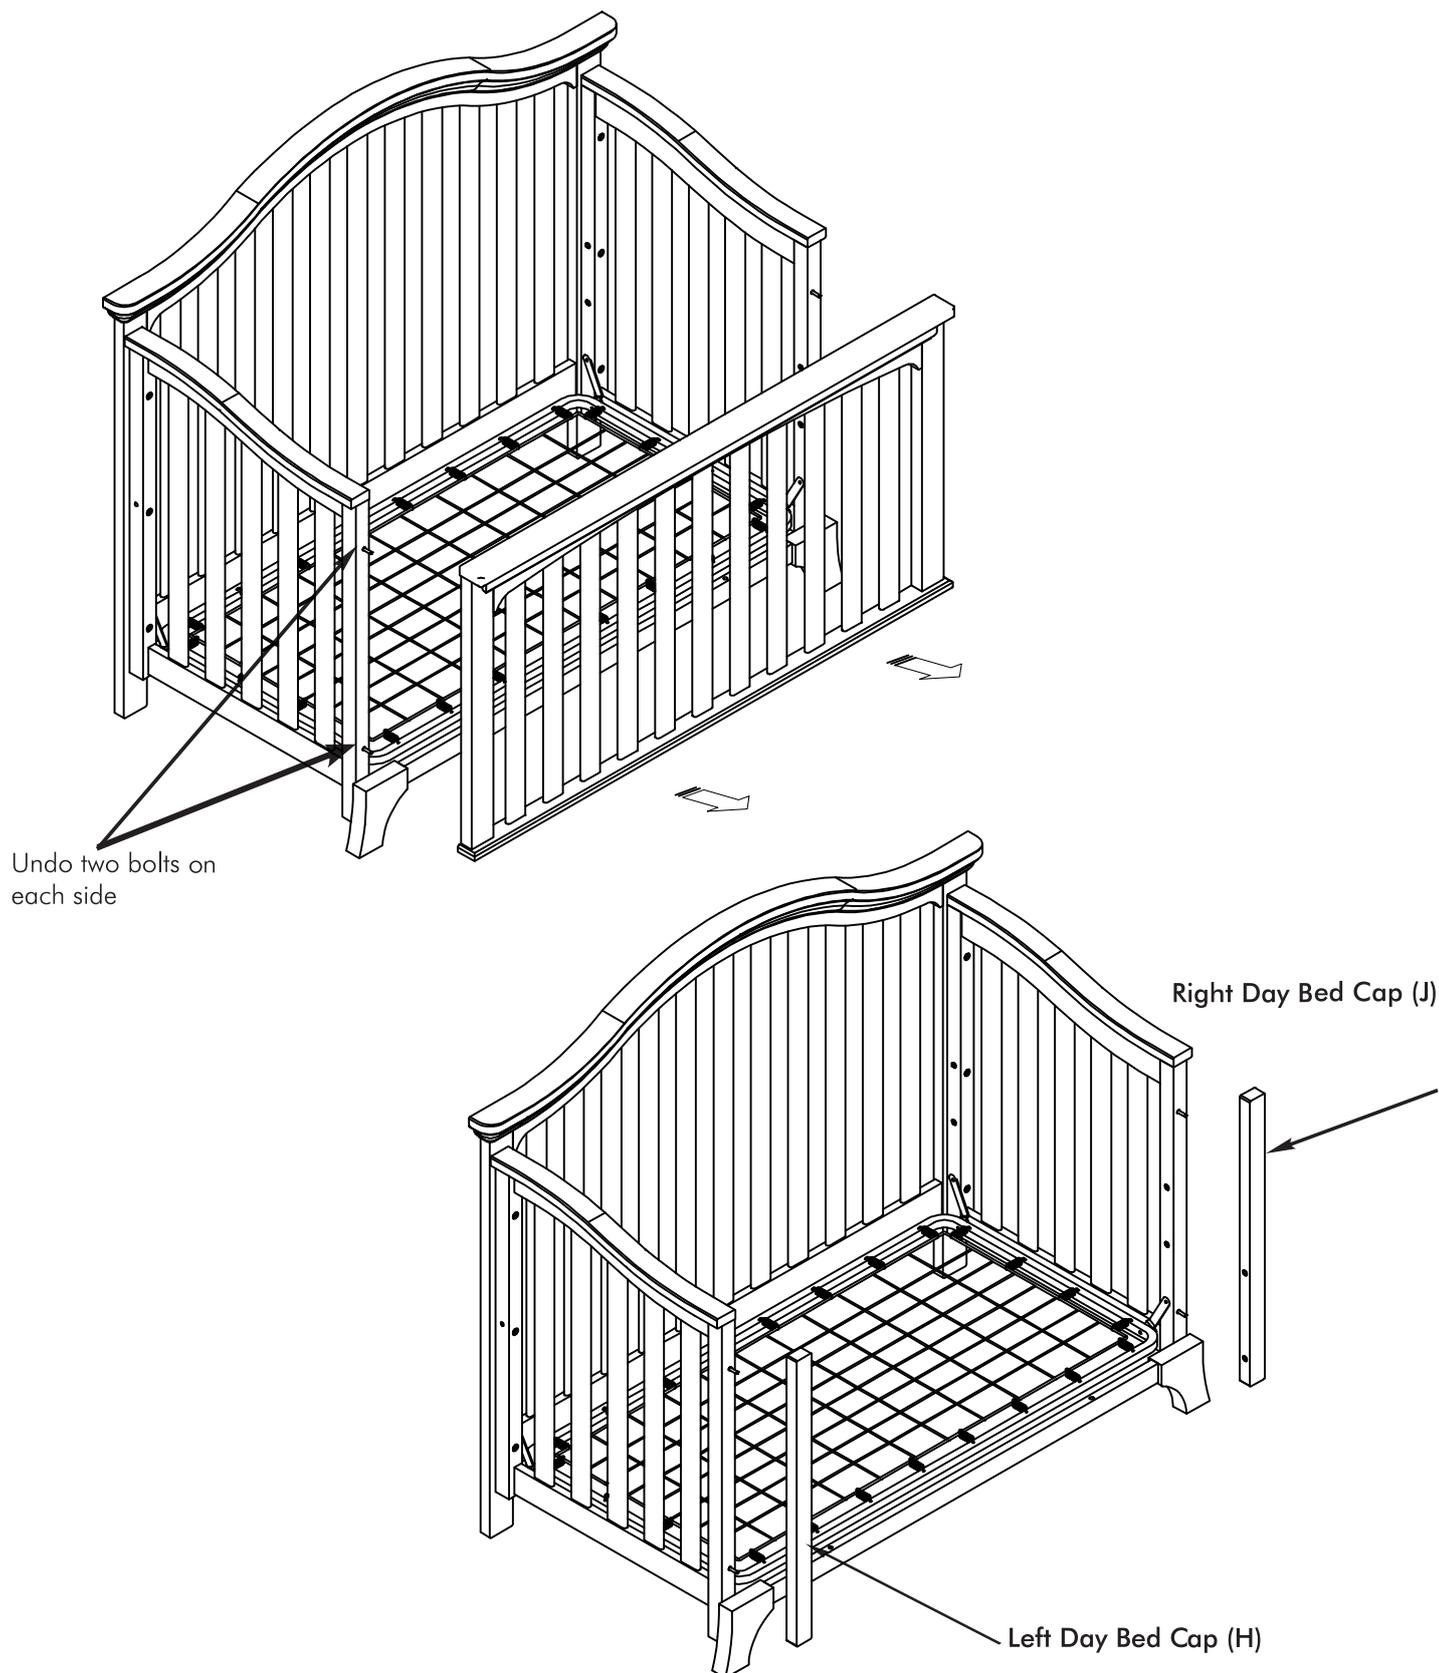

Step 2

- A.** Place the **Guard Rail** between the Day Bed Caps (the opening can be either to the right as shown or left).
- B.** Thread the four bolts on the Guard Rail into the fittings on the Day Bed Caps and tighten securely with the allen wrench.

